

Remove tissue covering before printing



Clayworks Supplies Fired-On Images™ Transfer Paper MS (Multi-Surface)

Printer Info:

ANY HP or Canon **Black *ONLY Laser Printer, Copier or Fax** machine will work. HP and Canon are only brands whose regular toner will work. If you already own a black-only laser printer and it is not an HP or Canon, check to see if there is a "Micr" toner cartridge available for your model laser printer. *Printer must **Not** have any ability to print in color.

Printing Images:

1. Set printer for **plain paper** standard US size 8 1/2"x 11"
2. Remove tissue protective covering, if present, before printing.
3. Place transfer paper into the **manual feed slot** of the printer one sheet at a time.
4. Print your image onto the **glossy side** of the transfer paper
5. Cut image close to edges and soak in warm water
6. When image begins to separate, lift out of water with backing paper still attached
7. Move into place on glazed surface and carefully pull backing paper out from underneath
8. Push all water and bubbles out gently with a soft paper towel or a brayer (roller) over a paper towel (do not use a squeegee)
9. Let dry and fire
10. Outside venting system is recommended while film burns away

Firing: Firing temp is dependent on glazed surface used.

Glaze Firing Temp	Transfer Firing Temp Cone#
Cone 06 opaque glazes	010-07
Cone 06 transparent glaze	014-012
Cone 5/6 all glazes	06-04
Cone 10 all glazes	03-01

Hints:

1. If Images fades... fire cooler. If image wipes off... fire hotter. If image disappears completely then wrong toner/ printer was used.
2. Works best on light colored non-moving glazes, if glaze bubbles or image crackles try a different glazed surface